## Instructions for continued airworthiness $$\operatorname{\textsc{DG-400}}$$

	content	page	issue	đ			
Diagrams							
1. 2. 2a. 3.	Rudder control circuit, undercar		Febr. July July Febr.	88 88			
4. 5. 6.	Template for checking aileron de Tow hook, water ballast release Powerplant with Bosch electronic (for Ducati electronic boxes red addition to drawing 4 M 71 see	system c boxes fer in	April Aug.	88			
7.	Powerplant extension-retraction mechanism	encrosure	April	88			
8. 9. 10. 11. 12. 13.	Fuel system Electrical system Empty weight centre of gravity placards Installation brake motor (Option	n BEA)	April July April June Sept. Sept.	84 88 86 90			
Encl	osures						
Draw: Draw: Insta for a	allation sketch EFWK "landing gea ing W 33 special wrenches ing W 34 " " allation sketch EFK additional to aerotow allation sketch EOD Dräger oxygen allation sketch 4EP ELT (3) ELT F	ow hook n system	March March Oct.	88 88 85 ,84			
	llier Instructions for the mainte		-	/89			
Draw: Serv: Serv: TN 82	0.01 A ing 4 M 71 ducati ignition boxes ice-information 0-2/92 ice-information 0-4/92 26/34 incl. Working instructions 1 and No. 2		April March Nov. Oct.	92 92 92			

Issued August 2001 TN 826/42 2a

## Maintenance manual DG-400

## Manual amendments

No.	Page	Description	Date	Signature
32	0.3, 2a,	Powerplant	August	
	diagram 6	TN 826/42	01	

0.3

