Maintenance manual DG-500MB

Manual amendments

No.	Page	Description	Date	Signature
1	2, 3, 4, 34, 57, 63, 64,	Engine, powerplant drive belt	Oct. 1999	
	93,	tension, DEI- circuit breaker,		
	drawing W57	manual revision		
		TN 843/13		
2	2, 3, 4, 11, 19, 27, 45,	Greasing schedule, new	Jan. 2001	
	47, 48, 49, 51, 62, 71,	attachment of the throttle		
	79, 91,	cable from ser.no 5E213 on,		
	wiring diagram 5E101,	manual revision		
	drawing W40	TN 843/16		
3	2, 3, 4, 5, 23 - 28, 30 -	Engine control, manual	March	
	34, 36a, 37, 49 - 51, 54,	extension and retraction	2002	
	72, 73, 78, 79, 84, 91,	control, carburettors, engine		
	93,	doors rubber cord, manual		
	wiring schemes 5E101	revision		
	issues G and H, 5E218	TN 843/17		
4	2, 4, 24, 91,	Extension-retraction unit,	June	
	diagram 13b, wiring	TN 843/18 issue 2	2003	
	scheme 5E101 issue I,			
	drawing 5E218			

Maintenance manual DG-500MB

	Content	Page	LBA
		0	approved
0	Airworthiness limitations	5	March 02
		6	Nov. 98
1.	System description and adjustment data		issued
1.1	Wing and tailplane setting data	7	Nov. 98
1.2	Elevator control and trim system	8	" "
	" "	9	
1.3	Rudder control	10	" "
1.4	Aileron and wing flaps control	11	Jan. 01
	" "	12	Nov. 98
	" "	13	" "
1.5	Airbrake control and wheel brake	14	
1.6	Undercarriage	15	" "
	" "	16	
1.7	Tow hooks	17	" "
1.8	Water ballast system	18	" "
1.9	Massbalance and weights of control surfaces	19	Jan. 01
1.10	Fore and aft play of the wings	20	Nov. 98
1.11	Power plant	21	
	" "	22	" "
	" "	23	July 02
1.12	Retraction-extension mechanism	24	June 03
1.13	Fuel system	25	July 02
	" "	26	" "
	" "	27	" "
	" "	28	" "
	" "	29	Nov. 98
1.14	Electrical system	30	July 02
	" "	31	" "
	" "	32	" "
	" "	33	" "
	" "	34	" "
	" "	35	Nov. 98
	" "	36	" "
1.15	Canopy operating handles	36a	July 02
2.	Inspections		
2.1	Daily inspection	37	July 02
2.2	Regular inspections	37	" "
	" "	38	Nov. 98
2.3	Inspection after a heavy landing	39	
	" "	40	
	н н	41	
2.4	Inspection procedure for increase of service	42	
	time	43	
Issued: Jur	ne 2003 TN 843/18 issue 2		2

Issued: see last item

1

Maintenance manual DG-500MB

	Content	Page	issued
5	Weight and balance	86	Nov. 98
	" "	87	" "
6.	Instrumentation and accessories list	88	" "
	" "	89	
7.	List of special tools	90	
8.	Partslist	91	June 03
	" "	92	Nov. 98
	" "	93	July 02
Diagrams			issued
1	Elevator control, trim		April 90
2	Rudder control		
3	Aileron, wing flap and spoiler controls in the fuselage		
4	Aileron, wing flap and spoiler controls in the wings		
5	Tow releases		
6	Water ballast system		
7	Landing gear, hydraulic wheel brake		
8	Systems for static and total pressure		
9	Placards		Sept. 98
10 11	Steerable nose wheel		April 90
11	Powerplant		Sept. 98
12 13b	Powerplant Extension-retraction mechanism		June 03
130	Fuel system		Sept. 98
14 14a	Installation of the fuel filter		Sept. 98
14a 15	Propellerbrake		
16	Engine door control		
10	Retaining cable		
Enclosures	Retaining cable		issued
Equipment l	ist	(94)	Nov. 98
		(95)	Nov. 98
	llation Dräger oxygen system	(55)	08.10.90
	llation ELT ACK		07.12.98
	ng scheme issue I		25.06.03
5E102 Wirin	8		2.07.03
5E102 Wirin			02.02.99
	ndment to the wiring plan 5E102		25.06.03
	for inspection 500/20		July 1995
	re for TN 348/4		" "
Working instruction No. 1 for TN 348/4			Oct. 1994
Working instruction No. 2 for TN 348/4			" "
Tool for airbrake adjustment			14.10.94
Drawing W40			30.11.99
Drawing W51			20.11.96
Drawing W57			10.09.99
Drawing 8E210			22.05.97
Drawing 5M110 Issued: June 2003 TN 843/18 issue 2			04.02.98
issuea: Jun	4		

Maintenance m	anual DG-500MB
---------------	----------------

1.12. Retraction - extension mechanism

- 1.12.1 Layout see diagram 13b
- 1.12.2 **The retraction-extension mechanism** (spindle drive) consists of a 12 V electrically driven sealed ball screw shaft type Stross BSA10 special version for DG-500MB.


1.12.3 Extension time of the spindledrive

The time for extension is approx. 10 seconds. If the extension takes longer than 15 seconds the spindledrive must be replaced.

1.12.4 Adjusting the maximum extension of the powerplant

The maximum extension of the power plant is limited by the length of the retaining cable. When the cable is replaced, the new one has to be stretched with 500 daN (1125 lbs.) before installation. With the cable fully tensioned, the propeller mount should be 83° to the upper edge of the engine compartment, see sketch. For adjustment see also sect. 1.12.6. For measuring extend the powerplant via the manual switch or the ignition switch. Due to the automatic system the spindle drive stops shortly before the cable is fully tensioned. To reach the fully extended position the propeller mount top must be pressed forward by hand until the cable is tight (you should feel and hear that the cable comes to its stop).

Adjustment of the length of the retaining cable is via the adjustment screw at the rear engine bay bulkhead, see diagram 17.

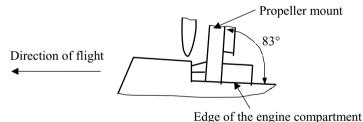

1.12.5 **Position switches**

Position engine retracted: via a switch actuated by the propellermount Position engine extended: via a switch actuated by the muffler frame

Issued: June 2003

8. Partlist

In this list you will find only parts of the powerplant and the electrical system.

Please find the part no's of the control-system parts and of the metal fittings of the powerplant in the following diagrams.

8.1 Parts for the powerplant

a) necessary for the 25 hours inspection

40050360 Spark plugs S36 (Bosch W5AC electrode gap 0.5 mm) with screw cap fastened to the thread by crimping (4 pieces necessary)

Caution: Bosch delivers the W5AC spark plugs with removable caps. It is not allowed to use these spark plugs. Spark plugs S36 can be identified by a dot of red paint on the insulator.

not anowed	to use these spark plugs. Spark plugs 550 can be identified b
a dot of red	paint on the insulator.
60507570	Fuel filter Entrata IN straight CH27
60507569	Fuel filter Entrata IN 90° elbow CH28
60500150	Gaskets for exhaust manifold (2 pieces needed)
60500142	Airfilter
70002200	Oil for airfilters with cottonfabric K&N 99-05046
b) Spare p	arts
60510821	Spark plug connector Bosch 0356351032 1k Ω
60500127	Nut for spring coupling M 8 for exhaust muffler (Rotax
	842330)
60500128	Spring for spring coupling M 8 (Rotax 239628)
60502500	Starter motor: DENSO 128 000-1671 12 V
	or DENSO 12 000-1679 12 V
60500155	Gasket for coolant outlet
60504013	Drive belt Poly Chain GT 8 M 2520-45
59332050	Front bearing for upper pulley 32205B
59320320	Rear " " " 320/32X
52200054	Securing washer 20 DIN 462 for upper pulley front bearing
30002028	Special grease for upper pulley bearings SKF LGMT3
39001026	Exchange kit nuts and bolts for 400 h overhaul
(0000100	

- 60000182 Gas strut for muffler frame E1 E1-76-040-130/150N
- 60507561 Electric fuel pump Facet 40106
- 60001200 Electric water pump Webasto U4810 modified
- 60504049 Radiator KTM VW 00425
- 60504045 Extension-retraction spindledrive type
- Stross BSA 10 special version for DG-500MB
- 60504046 Voltage transformer for BSA 10
- 40872873Brake pad for propellerbrake (glued to mounting bracket)40050350Screw nipple S35 (Attachment of the throttle cable to the

91

carburettors, omitted from ser.no 5E213 on)

Issued: June 2003 TN 843/18 issue 2

Diagramm 13b diagram

-8.8zr

-096NIQ

DIN432Stzn

ĩ,

(washer)

Scheibe

80-100

clamp)

(hose

Schlauchschelle

15

V6 191

antrieb V Ne-drivel

spindl

lhose Spindel

für

enbalg

clamp) 32-50

auchschelle

Schl

'ndle-drive,

spi

Gabı

e b 10 <u>1985-8zn</u> 'x1.5x100 *D* shortened

∞.


DIN7984-

- 0211 8M229

3

DIN9021Stzn

4

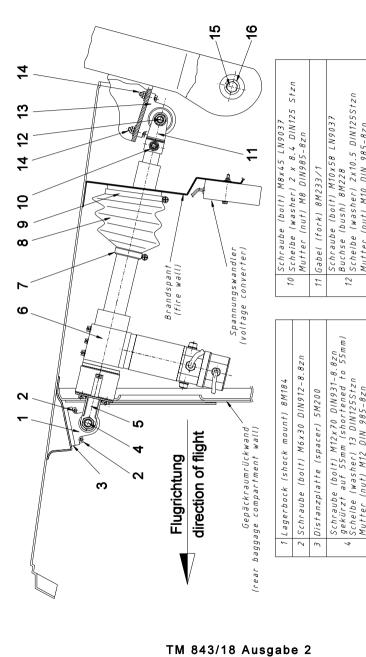

TN 843/18 issue 2

Ausgabe Juni 2003 issued

