



**Working instruction no. 2 for TN800/41
Installation of a fuse for the fire warning light**

1. Remove the instrument panel cover.
2. Look for the connector plug for the fire warning light (from the right hand side) and identify the positive wire (wire 82 in wiring loom).
3. Disconnect wire 82 and plug the fuse (supplied with wires and plugs) in-between.
4. Secure the fuse according to the photos with a Ty-rap 92x1.6 to the plug.
5. Reinstall the instrument panel cover.
6. Switch on the master switch, the fire warninglight must flash (self test function).

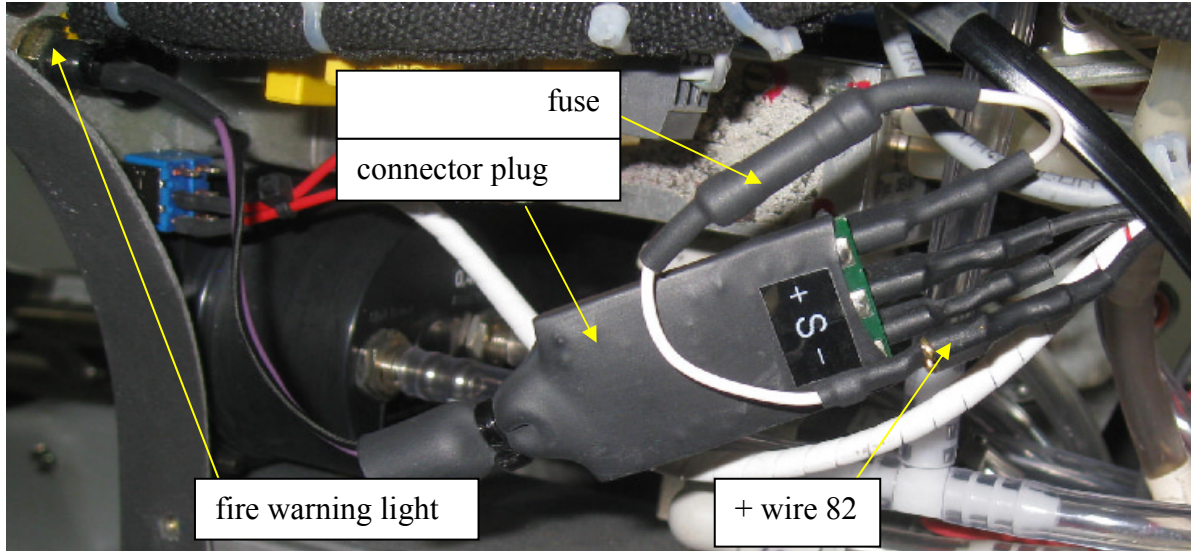


View towards the placard on the connector plug, fuse not secured with Ty-rap

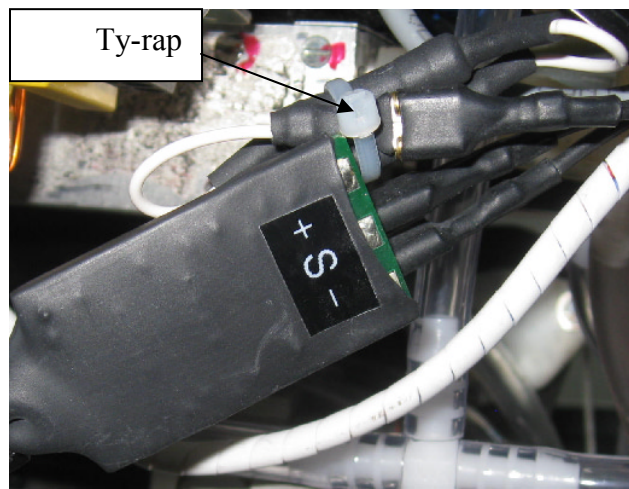

View fuse not secured with Ty-tap

View from the other side

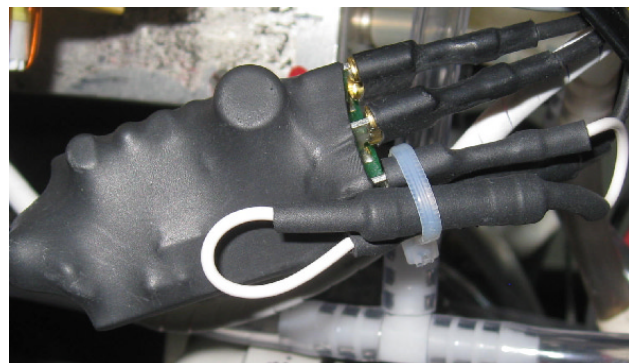

Material

quantity	DG part no.	designation
1	60504033	Fuse for fire warning light with wiring
1	60510951	Ty-rap 92x1.6