

Flight manual DG-800B

Rev. No.	Affected Pages/ section	Description	Issue Date	LBA Approval Date	Inserted Date Signature
8	0.4, 0.5, 4.8, 4.9, 7.14	Hydraulic disc brake TN 873/17 (Option)	October 1999	Nov. 1. 1999	
9	0.4, 4.4, 4.5	Permanently installed refuelling pump (Option)/ pump control from ser.no. 8-173 on ÄM 800-10-99	Nov. 1999	Nov. 12. 1999	
10	0.3, 0.5, 2.7, 6.2	Maximum mass of all non lifting parts ÄM 800-11-99 from ser.no. 8-191 on	Nov. 1999	Dec. 14. 1999	
11	0.4, 0.5, 4.12, 7.6,	TN 873/19 powerplant control extension-retraction switch unit (retrofit, standard from ser.no. 8-195 on)	May 2000	July 5. 2000	
12	0.3, 0.5, 2.10, 7.14	ÄM 800-12-00 Tow hooks/ only for aerotow (Option)	Sept. 2000	24.10.00	
13	0.5, 7.5	TN 873/20 Parking brake combined with an airbrake securing device (retrofit, standard from ser.no. 8-219 on)	Dec. 2000	07.02.01	
14	0.3 – 0.5, 1.5, 1.6, 3.6, 4.12, 4.13, 4.13a, 4.19, 4.20, 4.22, 7.3, 7.6, 7.7	ÄM 800/13/00 Vertical tailplane, steerable tailwheel, powerplant incl. electrics from ser.no. 8-219 on	Dec. 2000	12.02.01	
15	0.3, 0.4, 2.7, 4.14, 4.26	TN 873/23 manual revision	Febr. 2001	26.02.01	
16	0.3, 0.4, 0.5, 2.6, 4.5, 4.6, 4.8, 7.8	TN 873/26 manual revision	Nov. 2001	12.11.01	
17	0.5, 9.1-9.5	TN 873/18 emergency bail-out aid NOAH (Option)	June 2002	04.08.02	

Issued: see last item

0.2

Flight manual DG-800B

0.2 List of effective pages (cont.)

Section	page	issued	replaced	replaced	replaced	replaced
6	6.1	"				
	6.2	"	Nov. 99			
	6.3	"				
	6.4	"				
	6.5	"				
	6.6	"				
	6.7	"				
	6.8	"				
	6.9	"				
	6.10	"				
7	7.1	"				
	7.2	"	Febr. 99			
	7.3	"	Dec.00			
	7.4	"				
	7.5	"	Dec. 00			
	7.6	"	May 00	Dec.00		
	7.7	"	Dec.00			
	7.8	Dec. 97	Febr. 99	June 99	Sept. 99	Nov. 01
	7.9	Nov. 97				
	7.10	"				
	7.11	"	Febr. 99			
	7.12	"	Febr. 99			
	7.13	"				
	7.14	"	Oct. 99	Sept. 00		
7.15	Dec. 97	Febr. 99				
7.16	Nov. 97	Febr. 99				
7.17	"					
7.18	"					
8	8.1	"				
	8.2	"	Febr. 99			
	8.3	"				
	8.4	"				
	8.6	"				
	8.5	"				
	8.7	"				
9	9.1	"	June 02			
	9.2	June 02				
	9.3	"				
	9.4	"				
	9.5	"				

Issued: June 2002

TN 873/18

0.5

9. Supplements

9.1 Introduction

9.2 List of inserted supplements

9.3 Emergency bail-out aid NOAH

9.1 Introduction

This section contains the appropriate supplements necessary to safety and efficiently operate the sailplane when equipped with various optional systems and equipment not provided with the standard sailplane.

9.2 List of inserted supplements

Date of insertion	Document No.	Title of the inserted supplement
June2002	9.3, 9.4, 9.5	emergency bail-out aid NOAH TN 873/18

9.3 Emergency bail-out aid NOAH

Section 1

Introduction

In the following text the changes to those sections of the flight manual which are effected by the installation of winglets at the 18m wingtips will be given

Brief description

NOAH is a system to facilitate the bail-out of the cockpit in an emergency.

NOAH is a supplementation to the parachute.

NOAH features an airbag similar to a car airbag. The gas which is necessary to inflate the bag is stored in a pressurised gas cylinder. The actuation is by mechanical means via a handle at the right hand side near the control stick.

To actuate NOAH the canopy must be opened or jettisoned first. The system is secured by a metal plate at the actuation unit which is blocked by a GFRP block at the canopy frame.

When the NOAH system is activated the seat harness buckle will be opened prior to the opening of the pressurised gas cylinder. The pilot will be lifted by the airbag so that he can roll himself out of the cockpit.

If NOAH is used together with an automatic parachute, the emergency bail out procedure will be more or less automatic after operation of the NOAH handle.

Note: There is a small hole in the NOAH airbag close to the pressure relief valve. In case of inadvertent inflation of the airbag gas can stream out of this hole. This is to prevent injuries to the pilot if the seat harness buckle is not open.

Technical data:

Mass of all parts: approx. 4,5 kg

Generation of pressure: nitrogen approx. 200 bar

Filling time: approx. 2 seconds

Design range: pilot mass 110 kg up to 4 g

Section 3

Use of NOAH in case of an emergency bail out:

Note: We recommend strongly the use of an automatic parachute. Only with an automatic parachute will the bail out procedure be nearly automatic and precious time and altitude can be saved.

For the bail out jettison the canopy first, therefore pull the canopy emergency release and if necessary push the canopy upwards.

Warning: If there are loops at the rudder pedals make sure that your feet are out of the loops first.

Then pull the NOAH handle (at the right hand side next to the control stick, marked black and yellow) **strongly and quickly** up to its stop.

Roll out of the cockpit to the right hand side if possible, as on the left hand side the airbrake handle may impede the procedure.


Note: Don't operate the NOAH handle on the ground with open canopy as you may release NOAH and the pressurised gas cylinder must be filled again.

Section 4

a) Pre-flight inspection

Check the airbag, the high pressure hose and the operating cables for correct positioning and for any wear.

Check especially if the nipple of the cable which opens the seat harness buckle is positioned aft of the cam of the actuation unit see sketch:

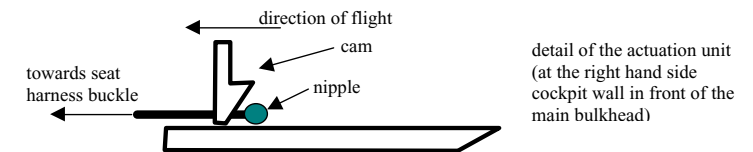

b) For normal opening of the seat harness buckle rotate the buckle only in clockwise direction.

Section 7

The NOAH actuation handle is located at the right hand side abeam the control stick, it is marked black and yellow. A sticker is wrapped around the actuation handle and the guiding tube for the actuation cable. The sticker serves as an additional means to guard against inadvertent operation.



Section 8

For inspections and maintenance please refer to the “manual for the emergency bail out-aid NOAH“.